

MIDI Control Change (CC) Messages

Software V4.2

March 12, 2026

MIDI CC #	MIDI CC Purpose	Value	Description
CC0	Bank Select	0-31	Selects the WaveMap per the Program Change mapping
CC7	Volume	0-127	Changes output volume from OFF up to 14dB
CC16	GP1 – Mute Footswitch	0-63 tap 64-127 hold	External control of Mute Footswitch
CC17	GP2 – Boost Footswitch	0-63 tap 64-127 hold	External control of Boost Footswitch
CC18	GP3 – Mute Control	0-63 mute 64-127 unmute	Enters and Exits Mute/Tuner mode per the data value
CC20	Compressor On/Off	0-63 Off 64-127 On	Turns compressor on only if a Compression Amount is set
CC21	Reverb WM Override	0-63 mute 64-127 unmute	Changes reverb to be global setting or WaveMap specific setting

Additional support and operational information is available on the Audio Sprockets website including:

SUPPORT - [AudioSprockets.com/support](https://www.audiosprockets.com/support)

